


Saint-Venant's Principle

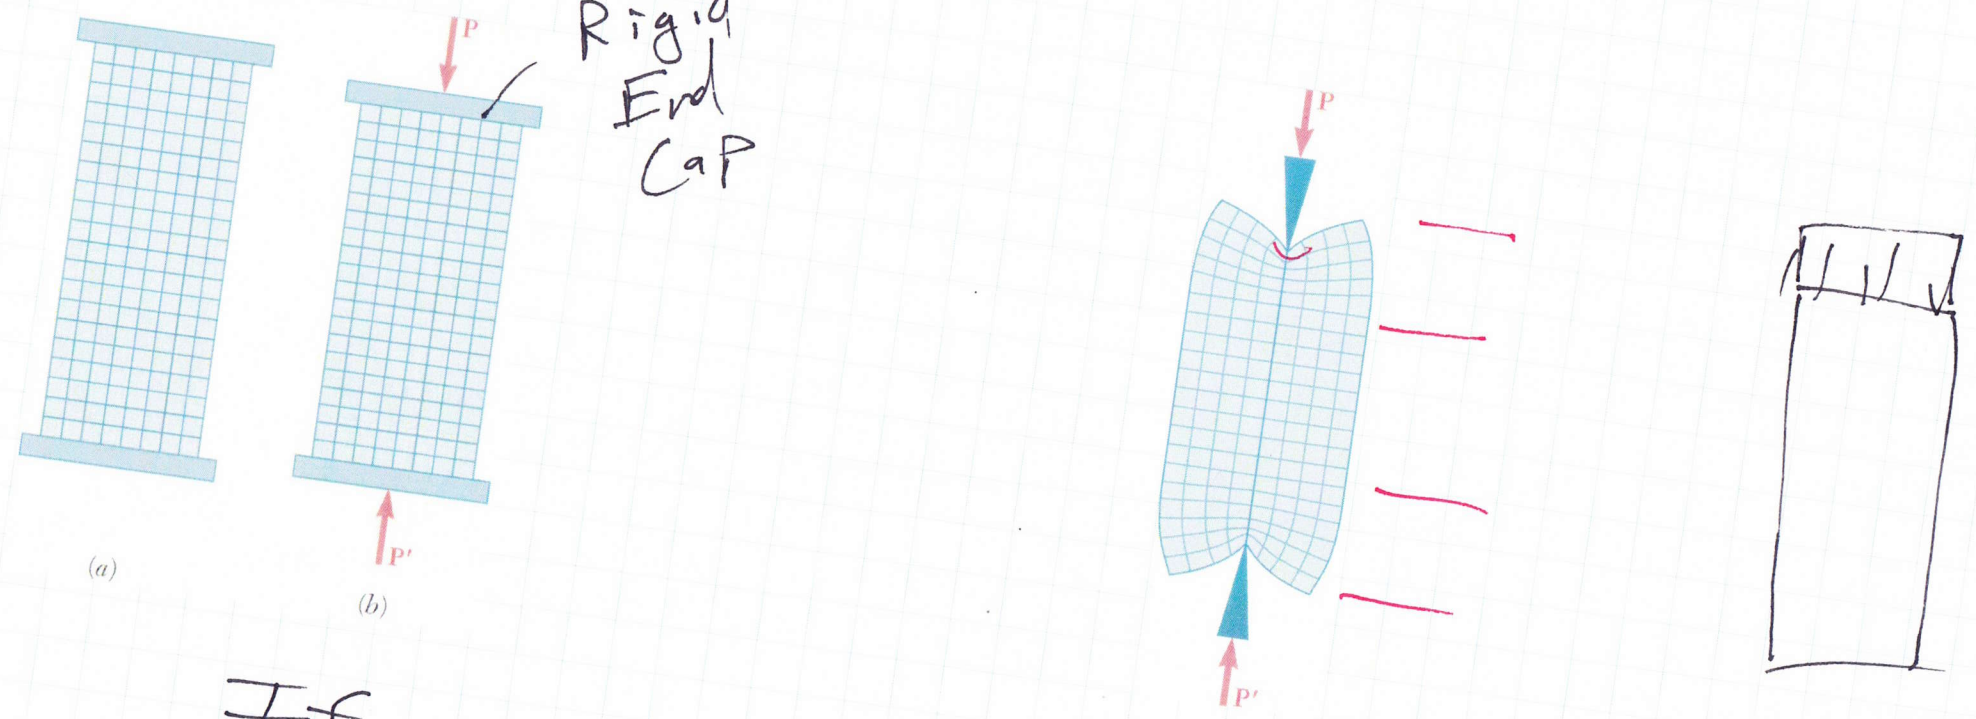

If you are a reasonable distance away from the point of application of the load, the method of application of the load is irrelevant.

Saint-Venant's Principle

